


## Sense Tylo Temperature High Limit Switch

Tylo High Temperature limit is thermo-disc part inside heater. There is white plastic rod that extends from high limit switch to opening in left side of heater frame (next to rating label).

If high limit “trips”, the metal clip pops out and pushes white rod out from heater frame. Pressing white stem will push clip back in.

When tripped heater will not produce heat. If it is Plus or Combi with Pure or Elite control, control will go blank

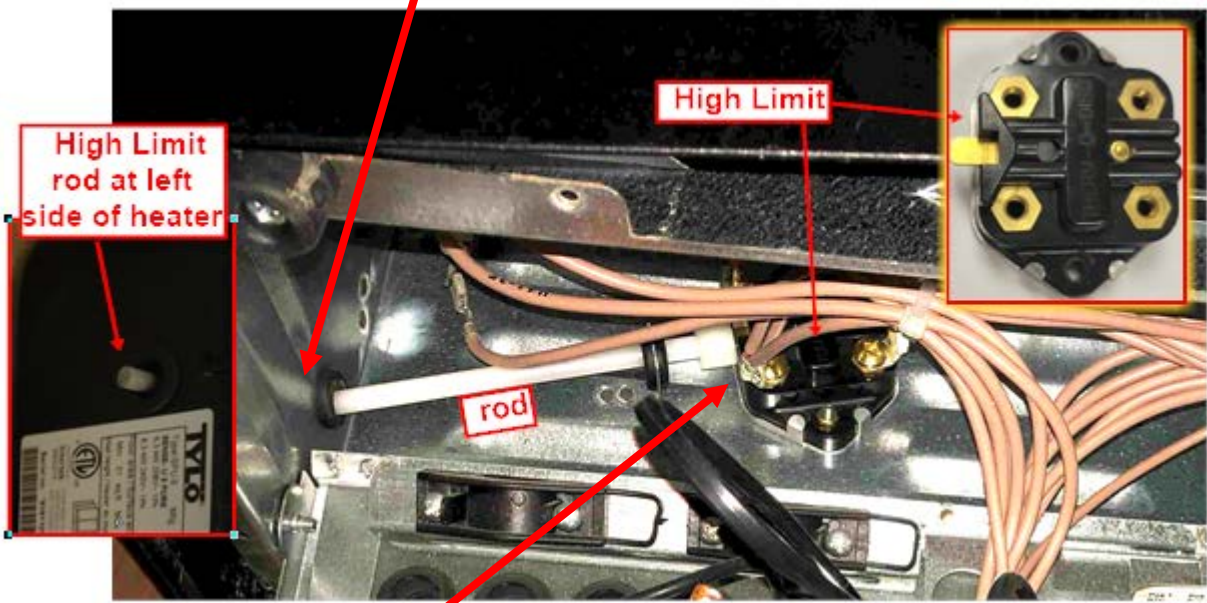

High limit tripped normal condition.



High limit tripped metal clip protrudes and extends rod.