



SaunaFin

Saunas & Steambaths

INFRARED SAUNA CONTROL OPERATION (SL-2)

INSTALLATION AND OPERATING INSTRUCTIONS

SECTION 6: SAUNALOGIC 2 IS CONTROL OPERATION

MODEL SL2 IS 60 MIN CONTROL PANEL (1601-37)

PRE-SET DELAYED START

Press the  icon and delay time will appear in the display and will toggle between “dlay” the amount of time remaining. The maximum of time is 24 hours. If no delay is desired, press button to toggle off the function.


 Bluetooth

 Decrease

 Traditional

 Lights

 Heat Time

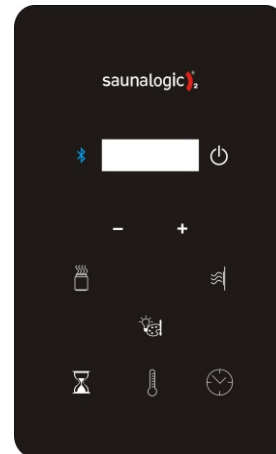

Power 

Increase 

Infrared 

Delay 

Temperature 

Traditional Sauna Operation

Press the SL2 IS  icon once and press the  icon. The default settings for the temperature is 194°F, the bath time is 60 minutes. These settings are adjustable (as described below) from 119° to 194°. Length of sauna can be set from 0 to 60 minutes. The time delay before start can be up to 24 hours. Any changes are remembered by the heater for your next bath. Should the heater power be lost then restored, the settings will return to their default values.

SETTING THE DURATION AND TEMPERATURE

Press the  icon for time "+" or "-" icon to increase or decrease time for desired setting. The maximum of time is 60 minutes.

Press the  icon and then press "+" or "-" icon to increase or decrease temperature for desired setting.

The maximum temperature is 194°F (90°C).

Note: Typical bathing temperature is 150F to 165F displayed on the control.

Infrared Sauna Operation

Press the SL2 IS  icon once and press the  icon. The default settings for the temperature is 149°F, the bath time is 60 minutes. These settings are adjustable (as described below) from 110° to 149°. Length of sauna can be set from 0 to 60 minutes. The time delay before start can be up to 24 hours. Any changes are remembered by the heater for your next bath. Should the heater power be lost then restored, the settings will return to their default values.

SETTING THE DURATION AND TEMPERATURE

Press the  icon for time "+" or "-" icon to increase or decrease time for desired setting. The maximum of time is 60 minutes.

Press the  icon and then press "+" or "-" icon to increase or decrease temperature for desired setting. The maximum temperature is 149°F (65°C).

Note: Note: Typical bathing temperature is 115F to 125F displayed on the control. Starting ambient temperature below 70F will cause the IR system to heat slower, which may result in less effective performance.

Note re Infrared sauna temperature setting:

Maximum temperature setting for infrared saunas is 149°F (65°C) Infrared saunas will not reach 149°F and is not intended to. Infrared rays only act upon the body when on. So, max. temp. is deliberately set above an achievable temperature.

**Optimal operational temperature in infrared saunas is 115-125°F.
Heat in the room is a side effect that makes the room feel "toasty".**



SAUNAFIN SAUNA & STEAM

106 Rayette Road, Unit 1, Concord, ON, L4K 2G3

TOLL-FREE

1-800-387-7029

PHONE

905-738-4017

EMAIL

info@saunafin.com

WEB

www.saunafin.com