

Tylo Cloud Elite Wi-Fi

REMOTE STARTING OF SAUNA HEATERS

There are three ways to turn on sauna remotely.

- 1. Wi-Fi: Tylo Cloud Elite:** Newest Elite Control & App now updated with cloud-based functionality that allows you to control your sauna from anywhere, anytime.
- 2. Hard Wired:** Sauna Craft EL-13-Rem control and Tylo Pure control are available with optional external switches. We provide an extra "button" that you install elsewhere (i.e. inside house when sauna is outdoors). You must run a separate wire from button to sauna.
- 3. Smart House Wi-Fi Technology:** **This does NOT mean Alexa or Google Home.** It refers to a separate whole home network like Crestron or Control4. This is something usually installed in custom homes when built, where a central hub connects all lights, window shades, music, etc. And that hub has Wi-Fi capacity. You would run wires from your Smart Home hub to the sauna equipment.



**Sauna Craft EL-13 (Not Wi-Fi) with external switch option**  
 You must run wire from switch to control

**EL-13-R REAR VIEW)**

**Tylo Pure Control (Not Wi-Fi) with external switch option**  
 You must run wire from switch to control.  
 (Comes with standard 50' cable. Optional 100' cable available)

**Tylo Sense Heater with Remote or "Smart House" computer integration**

There is no wiring diagram or such available besides connecting to Tylo's External Switch. Suitable cable then is 0,14mm<sup>2</sup> or 26AWG. If any other system are to use the external switch function, the switch need in most cases to be replaced by a relay or contactor if the system itself does not have the function of making the connection. Since it is a 3rd part system we can't provide with detailed instruction more than that of how the switch functions works.

Image below is unfortunately only available in Swedish as it's a new guide for the external switch that is still under work but this is a breakdown of the elements shown.

A: External Switch (or relay controlled by separate system)  
 B: Relay circuit board ("High" board = For any Combi and Plus-Elite)  
 C: Relay board ("Low board = Plus-Pure only)  
 D: Cable, 0,14mm<sup>2</sup> or 28AWG (same as used to connect control panel Pure or Elite to circuit Card)

Recommended max. length of cable, 100 meters.

**A. Externbrytare**  
**B. Reläkort High - med kontrollpanel Elite/Pure**  
**C. Reläkort Low - med kontrollpanel Pure**  
**D. Kabel 0,14mm<sup>2</sup> RJ10 4P4C, rak anslutning - rekommenderad maxlängd 100 meter**