


Elite

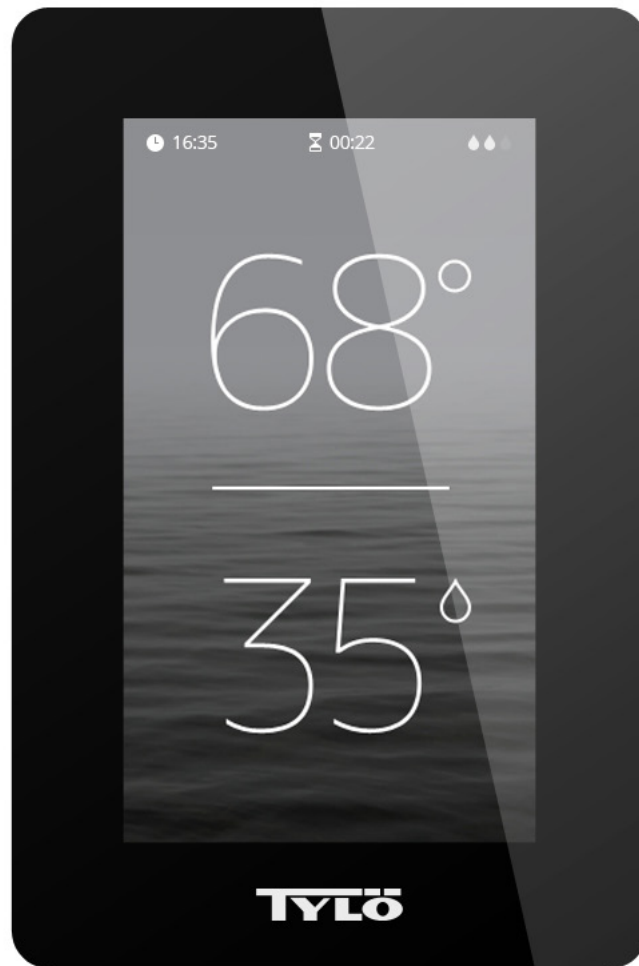

SV
EN
DE
FR
NL
PL
RU

Art. nr 2900 5205



CE IPX5



Installation Guide

The control panel can be installed inside or outside the sauna/steam room. If installing inside the sauna cabin, the upper edge must not be more than 90 cm above the floor, and must be at least 30 cm from the heater.

The unit can be mounted on the wall using the bracket or double-sided adhesive supplied. If using the bracket, mount the control panel on the bracket using adhesive.

A 30 mm hole through the wall is required if mounting the control panel directly on the wall.

When installing the panel inside the steam room/sauna, installation must be directly to the wall, using the accompanying adhesive or a Tylö embedding frame (item no. 90001056). The wall must be smooth and perfectly clean after hole drilling (30 mm) before installation. The bracket must not be used.

If you have purchased an Elite check the coverage of your wireless network before you finally install the control panel (see also Configuring: System settings in this guide).

Installation with bracket

Use the bracket as a template to mark up screw holes on the wall. Tighten the screws a little until the bracket is loosely secured.

Secure the adhesive to the bracket (see Figure 1).



Fig. 1

Remove the protection from the adhesive and secure the panel to the bracket (see Figure 2).

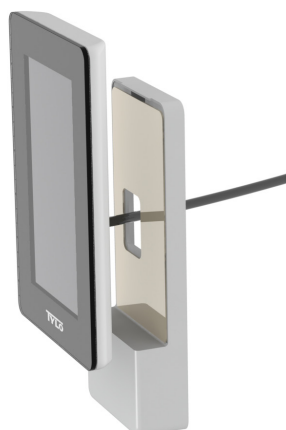


Fig. 2

Attach the cable and switch to the bracket (see Figures 3 and 4). Remember to position the switch in accordance with the illustration (the locking tongue should be at the left side when seen from below). Install the panel on the wall. Use the supplied control panel cable to connect the panel to the heater. If the cable is too long, it can be shortened, then use the extra switch supplied. NB: special pliers are required (crimp pliers for RJ10).



Fig. 3

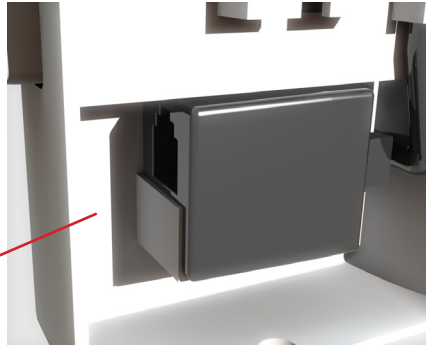


Fig. 4

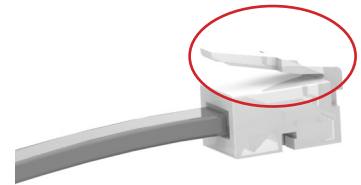


Fig. 5

Installation without bracket

Attach the double-sided adhesive to the control panel. Before attaching the panel to the wall, connect it to the heater to check that everything works. Remove the protective backing from the adhesive. Connect the panel wire, pass the contact through the hole in the wall and press the panel firmly against the wall. If fitting the panel without the bracket but it is necessary to run the cable outside the wall, the following solution can be used (see Figure 6). This only applies to installation inside the sauna cabin. Remember that the hole through which the contact will pass must be min. 30 mm.

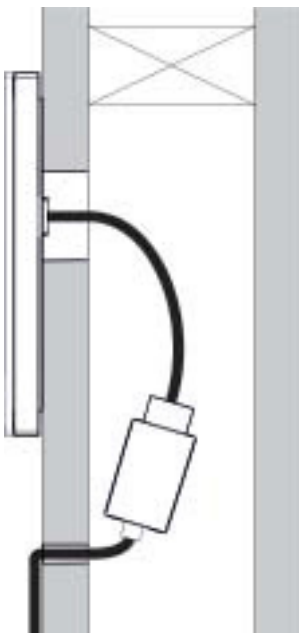



Fig. 6

Quickstart guide


In order to quickly get started and use your new sauna or steam room, read the whole of this guide. It describes the basic operations that you need to know. The complete manual can be downloaded from www.tylo.se.

Initial set-up


At the first start, certain basic parameters are set. Touch the screen to indicate your choice and then > (or <).

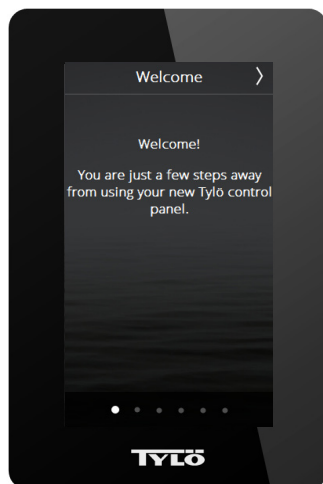


Welcome screen
(touch >)

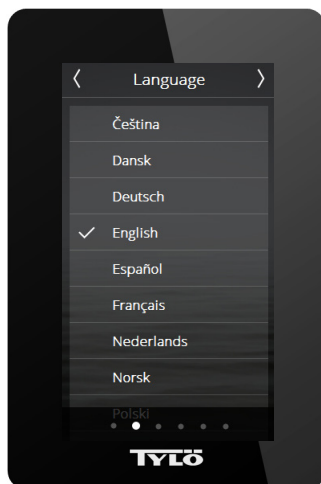


Select language

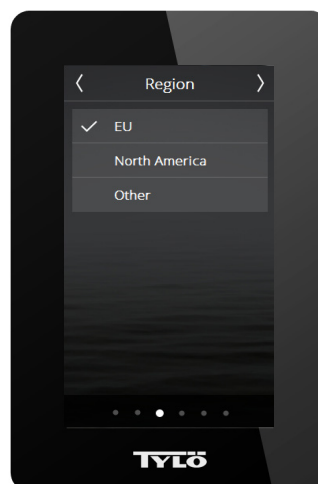


Select region

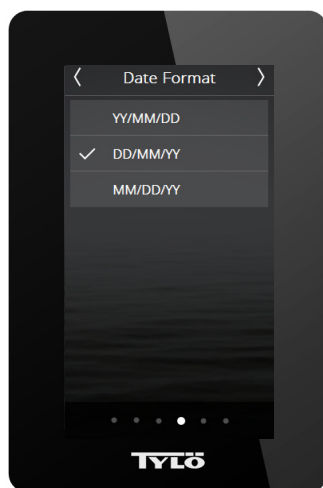

Select the date format

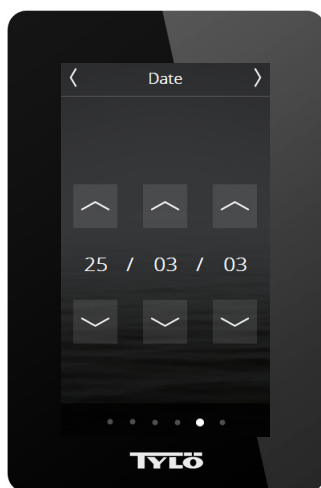

Set the date:

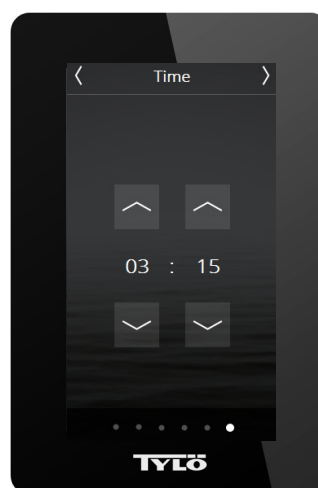

Set the time:

Several other parameters are set automatically on the basis of the above settings, and the type of heater. Any of the parameters can be altered later. They are described in the manual.

Overview

The overview screen is shown both when the heater is switched off (Figure 7) and when it is on (Figure 8).



Fig. 7



Fig. 8

Air humidity setting

Temperature setting

Current temperature

Current relative air humidity
(only shown if the temperature/
humidity sensor is connected on
the Combi and Tylarium models)

Current time


Remaining sauna
time

Water level in the tank (applies to
the Combi model)

Shows that the panel is
connected to Wifi (only the
Elite Wifi model)

Home

Get to the Home screen (fig. 9) by touching the screen in the Overview mode or by pressing the Home button. The Activity buttons are used to start and stop the heater. A Standby button is also shown. When one of the activity buttons is pressed, the colour changes to indicate the current status.

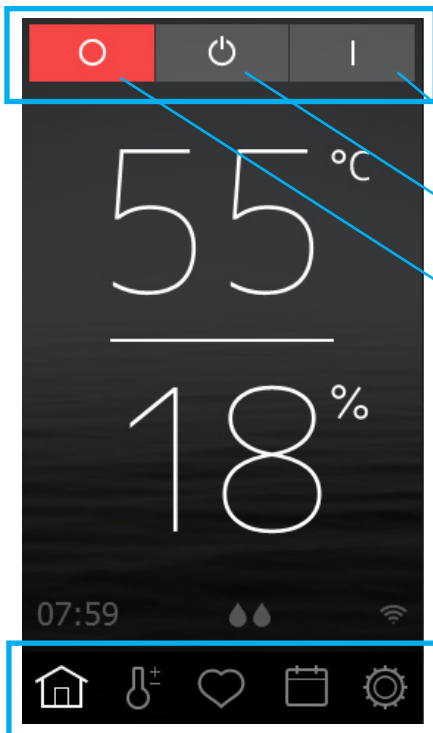

Activity/Status buttons

On

Standby:

Off


Functions/Settings buttons

Fig. 9

Functions/Settings buttons



 Home: Show information concerning temperature and humidity, along with activity/status buttons and Functions/settings buttons.



Setting up: Setting the temperature, sauna time, humidity, etc.



 
Favourites: Saved favourite settings.




Calendar: Creating a calendar and/or weekly program.



Configuration: System settings.



Settings

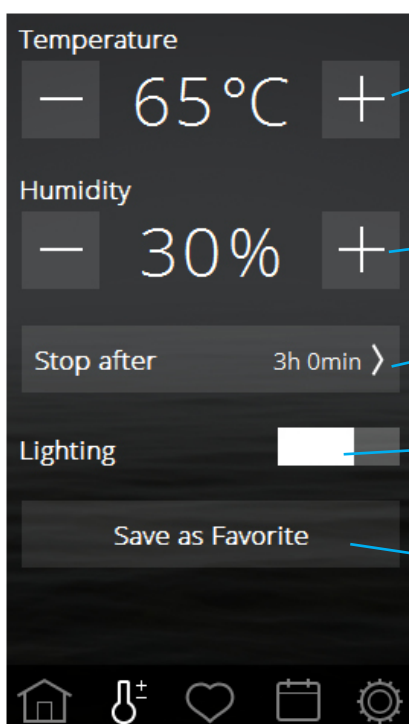

Setting temperature

Setting the desired air humidity. Only on the Combi and Tylarium models.

Setting the desired sauna time.


Lighting Off/On

Save the settings as a favourite.

In settings, everything is set for the sauna. These settings can also be saved to Favourites.




Favourites:

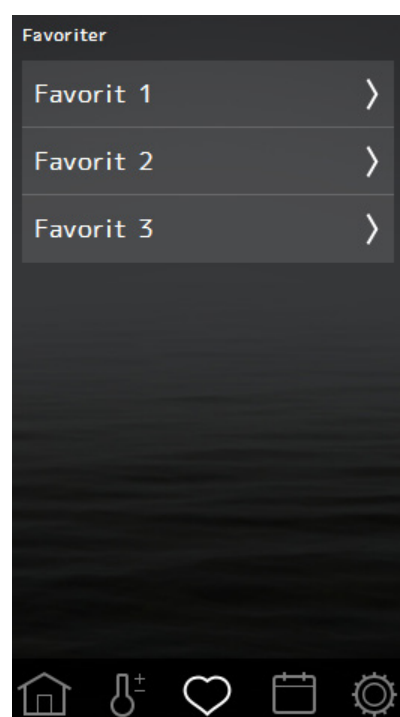

The Favourites that were saved during setting up are saved with this symbol. In order to start, delete or edit, press on the field with the name of the favourite.



Calendar

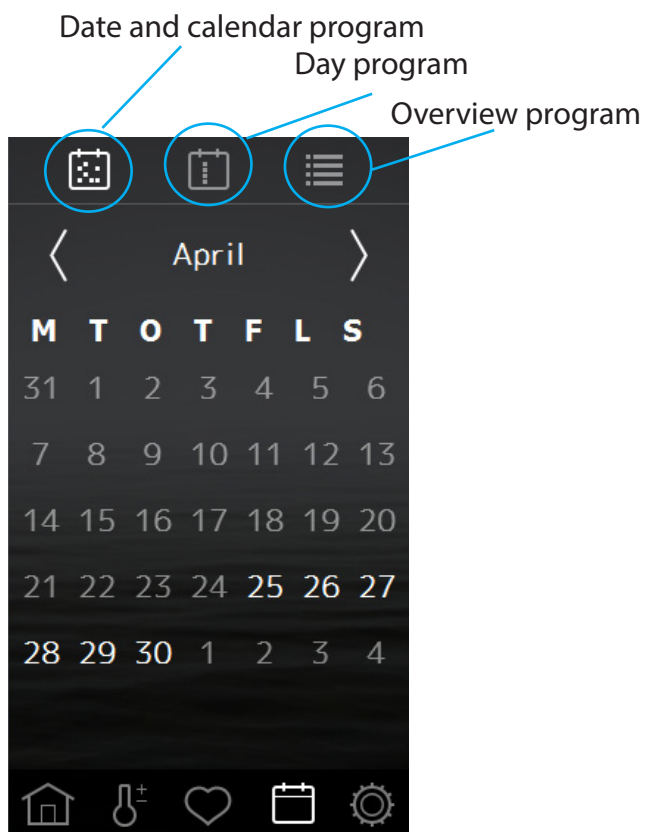

In order to be able to use the Calendar functions for the Sauna and Combi heaters, and also the Tylarium installation, a door switch is required, connected to the door (Tylö part no. 90908035).

While setting the calendar function you can create programs for individual dates or programs that repeat every week.





Configuration: System settings.

During Configuration there is both information about the system and the possibility to adapt and set various functions and parameters. It is also possible to configure additional equipment (such as for example fragrance pumps or extra lighting).

When Configuration is touched, the screen shows a menu with a number of separate sections. IN order to see more rows, put your finger on the screen and draw it up or down.

Only the Wifi menu is described in this quickstart guide.

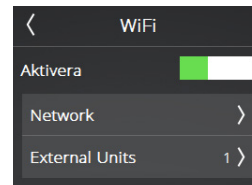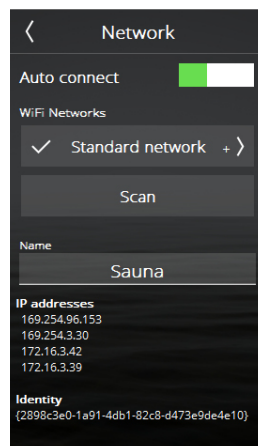

In order to be able to use Wifi for the sauna and Combi installation, a door switch must be connected.

Bear in mind that the position where the control panel is located affects how well it can communicate with the wireless network. Many kinds of material disturb the wifi signal. Test first with a smart phone where you are thinking to locate the control panel, to ensure good communication.

In order to connect to your local network, first activate Wifi and press Network. Then press Scan which searches for the accessible networks. In order to connect, press on the desired network; if a password is required press on Password, enter the password and then press Connect. In order to connect mobile applications or PC applications refer to the app instructions on the Tylö web site (www.tylo.com/elite).

Under Name you can name your system. A default name is present to begin with, and this depends on the system you have. In order to change or alter the name, press it and a keyboard will appear for editing.

If you activate Auto connect the Elite Wifi will automatically connect you to the selected network after a power cut.

TYLÖ[®]
for the senses