


EL-13 Conversion from EPC-9 Control

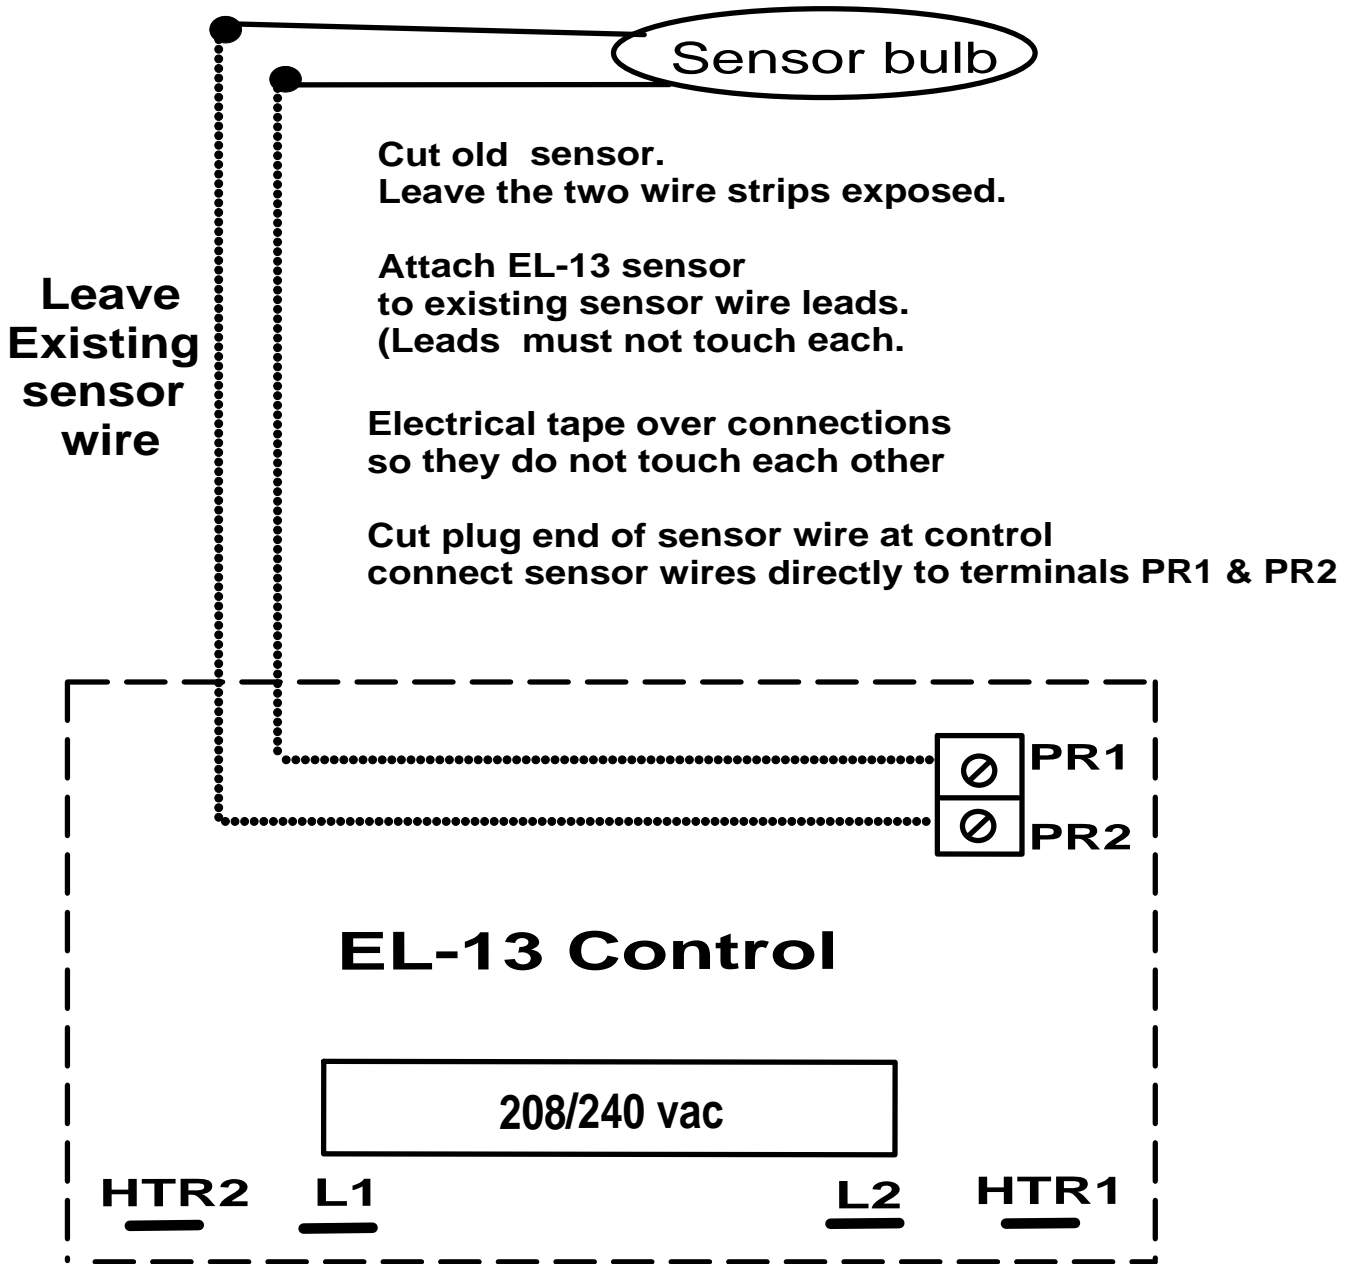

Conversion kit includes four #10 SEW-2 wires with spade connectors. These are for use when supply wire is #8 (spade connectors don't fit #8) Use wires supplied and connect to your #8 wire with wire nut.

Check EL-13 instruction manual for other installation details