


Jamb Extension Detail

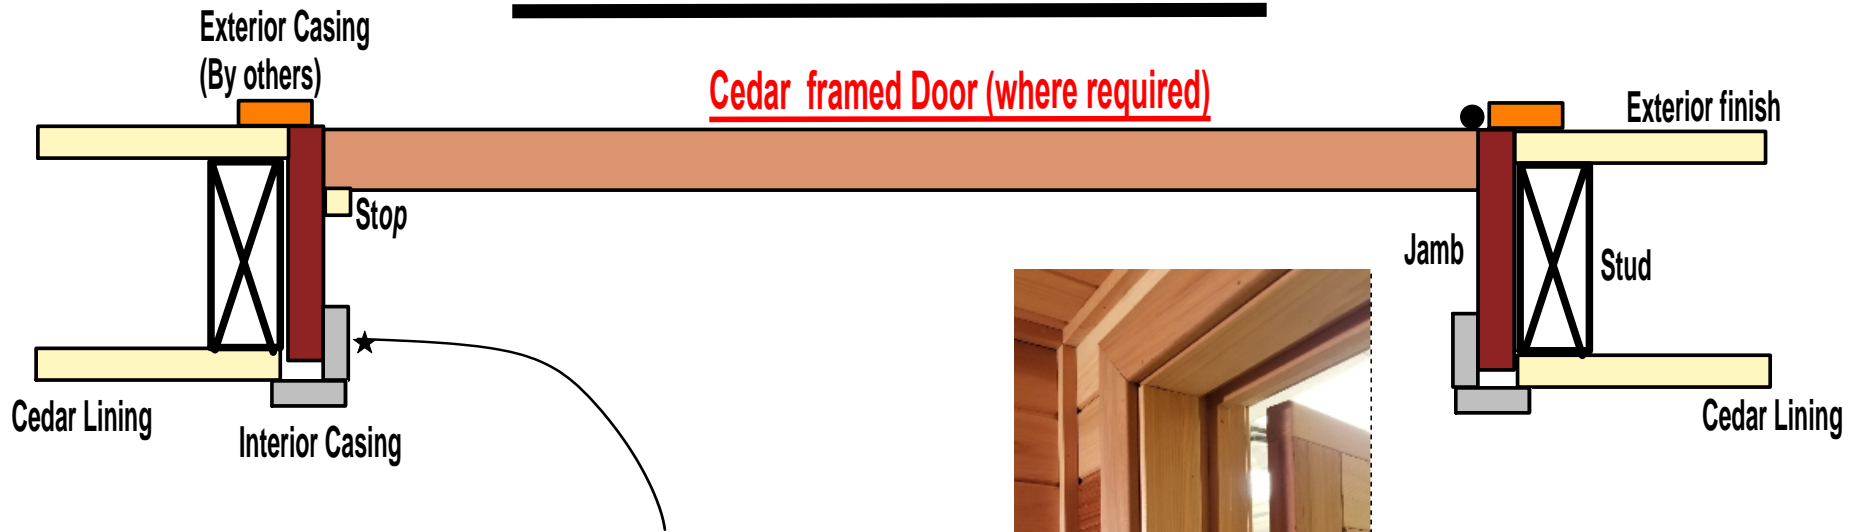


Where stud wall is thicker than standard; i.e 2x6 studs. 1x2 or 1x3 for jamb extension.

Secure jamb extension to jamb so that it extends flush with inside cedar lining of sauna.

Install inside casing to conceal the gap at the jamb.

Exterior finish & Casing (By others)

Frameless Glass Door

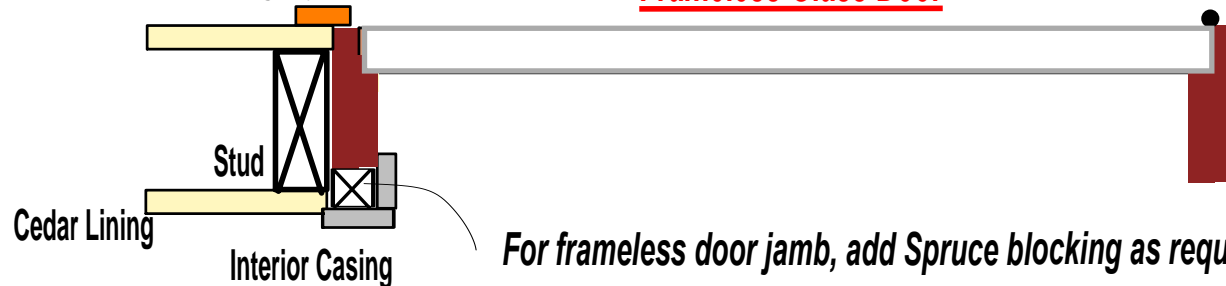

For frameless door jamb, add Spruce blocking as required to fill gap. Use 1x2 or 1x3 for jamb extension.